



# Outboard Thermometer



(Navy Bucket)

1975

2510.0000 BG  
2511.0000 BG

Seite: 1 / 3  
page:

1	2.83		Lo
Ausg.	Datum	Ers. durch	Name

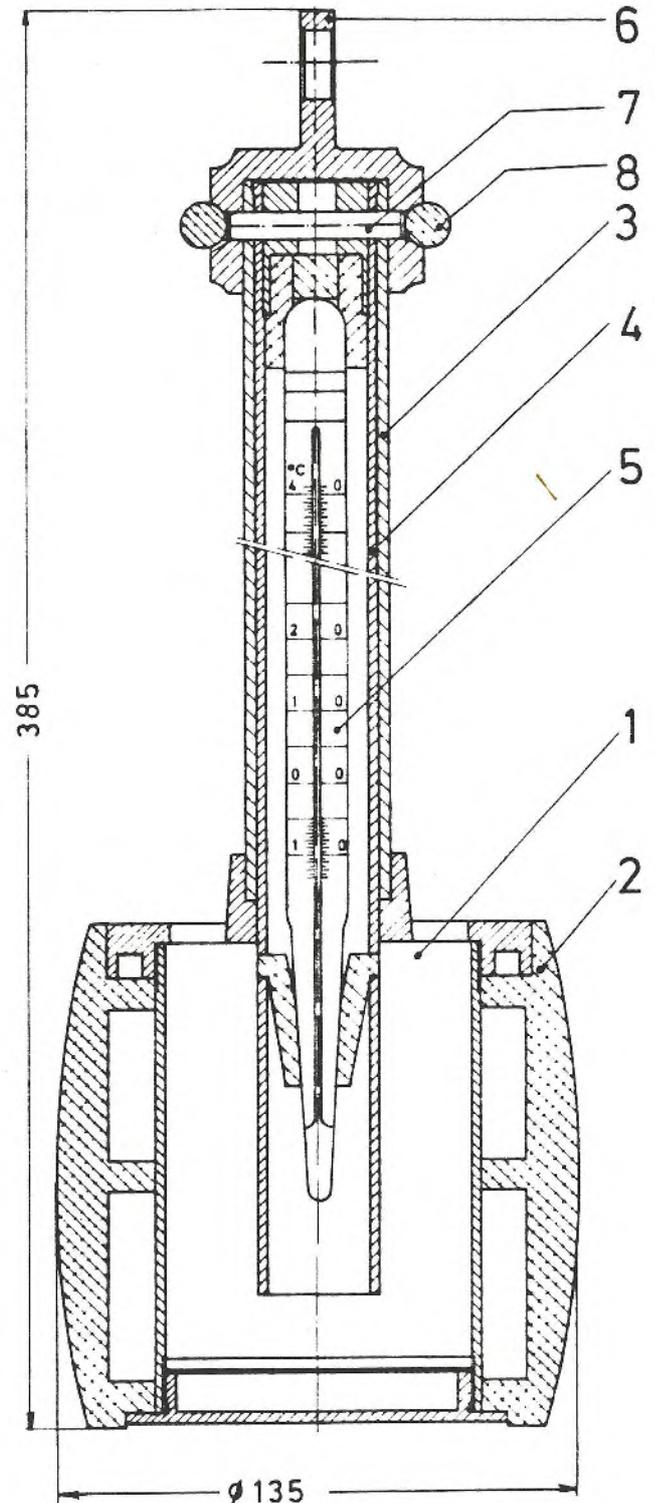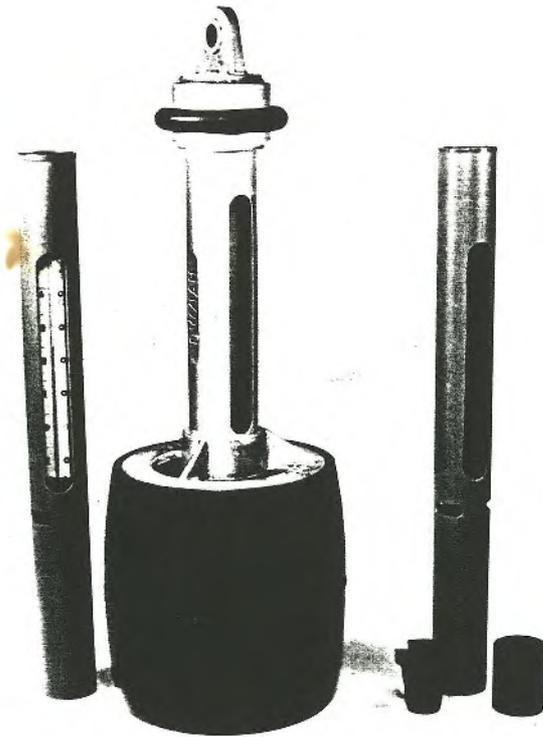

## Description

The outboard-thermometer serves for the measurement of water temperature and for extraction of water samples on board of ships.

Construction of the device:

The major components are: water vessel (1) with protecting rubber barrel (2), outer thermometer-shielding tube with vertical scale display (3), inner plastic tube (4) with thermometer (5), terminal with holding eyelet (6), pin (7) and rubber ring (8).

The water vessel is a thick walled brass cylinder with an upper and a lower flange of red brass Rg 5. Two layouts for the upper part are possible: with and without spout. The sea water-proof and oil-proof rubber barrel is manufactured so as to dampen occasional bumps against the side of the ship. The outer thermometer-protecting tube with scale display is manufactured out of brass. It is hard soldered into the upper casting. The design of the scale display enables correct reading of the whole temperature range from  $-10^{\circ}\text{C}$  to  $+40^{\circ}\text{C}$ .



# Outboard Thermometer

( Navy Bucket )

2510.0000 BG  
2511.0000 BG


Seite: 2 / 3  
page:

1	2.83		Lo
Ausg.	Datum	Ers. durch	Name

The terminal is again an Rg 5-casting, which fits onto the thermometer-protecting tube. For fixation a cylindrical pin is inserted into the terminal and the tube. This pin is located below the rubber-ring in order not to get lost. Only after having removed this ring the pin may be drawn out. All mentioned brass and red brass parts are dull chrome plated warranting a better protection against corrosion.

As thermometer a mercury-filled thermometer is used.

The measuring range extends from  $-10^{\circ}\text{C}$  to  $+40^{\circ}\text{C}$  with a scale division of  $0.5^{\circ}\text{C}$ . If desired, a finer graduation-reducing the measuring range- may be provided (special layout). Each thermometer can be delivered with an official test certificate ( extra price ). The thermometer is kept in its position through an upper and lower rubber socket in the interior of the plastic tube. This tube is easily inserted into the outer tube in such a way, that their scale displays coincide. Due to the fact that the plastic tube reaches down very close to the bottom of the water vessel, it is achieved that the filling water flows necessarily past the mercury vessel and a well-mixed and hence uniform-temperature condition of the water sample is obtained (see sketch).

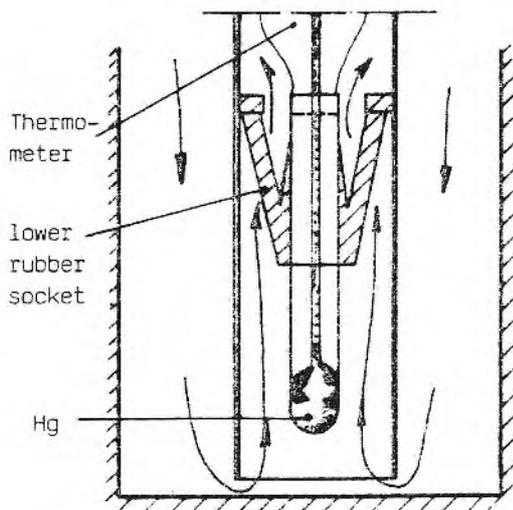

Water flow during filling the vessel (principle).

## Technical Data:

Measuring range:	$-10...+40^{\circ}\text{C}$
Scale division:	$0.5^{\circ}\text{C}$
Measuring precision:	$\pm 0.5^{\circ}\text{C}$
Dimensions:	
Bucket:	height: 385 mm max.diameter: 135 mm
Transportation case:	335 X 235 X 435 mm
Weight:	
Bucket:	ca.4.6 kg
Transportation case:	ca.6.2 kg

## Ordering code:

Navy bucket, complete with transportation case and accessories,

type 2510.0000

Navy bucket with thermometer and rope but without transportation case and accessories,

type 2511.0000

Official test certificate and other measuring ranges upon requirement!

## List of Contents, Transportation Box:

1. Transportation- and storage case, empty
2. Complete outboard-thermometer
3. Rope, 20 m
4. Bar of round section
5. Spare thermometer
6. 3 guard rings
7. 3 protective sleeves
8. 3 protecting covers



# Outboard Thermometer

(Navy Bucket)

2510.0000 BG  
2511.0000 BG


Seite: 3 / 3  
page:

1	2.83		Lo
Ausg.	Datum	Ers. durch	Name

## Operating Instructions

### Handling:

The outboard-thermometer is delivered with rope. The transportation- and storage case, which contains all required accessories, as well as tools and spare parts, has turned out to be of practical value. (See illustration).

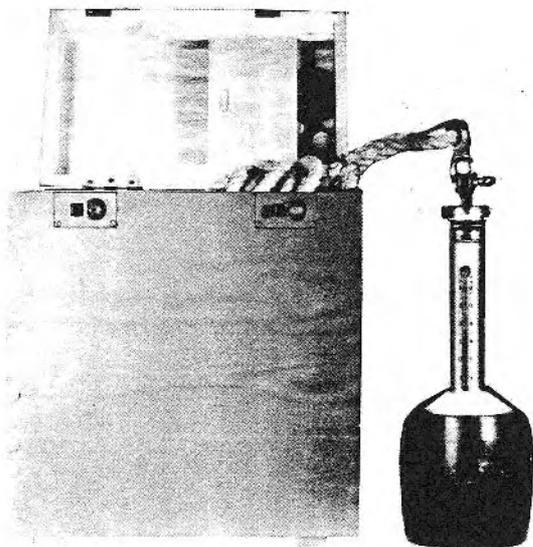

The rope, which is contained in the transportation case, is fastened by means of a shackle at the terminal eyelet; the bucket then can be lowered into the water. To avoid incorrect measurements, the bucket should be allowed to stay for a while in the water so that a heat exchange between the seawater and all units can take place. For the same reason, during a certain time before the measurement, the device should be screened from incident solar radiation, as otherwise a rather high temperature difference may arise between the device and the sea water. After having taken the bucket on board the temperature has to be read off immediately in order to get correct values. After use the device and the rope have to be dried before storage in the transportation case.

### Maintenance:

The bucket is essentially maintenance-free !

### Replacement of Thermometer:

After stripping the upper rubber-ring off the underlying cylindrical pin is pushed out with the corresponding taper plug and the head (terminal) is taken off. By means of the included hook the plastic tube is lifted and drawn out of the protecting tube (outer tube).

In order to replace the defect thermometer the upper rubber socket is removed and the thermometer is taken out. The lower rubber socket remains in the plastic tube and can be rubbed with talcum so as to facilitate the installation of the new thermometer. The assemblage is carried out in reverse order as described.

Technical data are subject to change!

**THEODOR FRIEDRICHS & CO.** · Postf. 1105 · Borgfelde 6 · 2 Schenefeld 1, Bez. Hamburg

Feinwerktechnik · Meteorologische Geräte · Telefon: (040) 830 60 71

Telex: 211 034 · Telegramm: Tefritechnik